

# PERIODIC CHECKING OF PERSONAL PROTECTIVE EQUIPMENT CONNECTORS

## DEVICE IDENTIFICATION SHEET

Trademark		Manufacturer	Aludesign S.p.A. Via Torchio 22, 24034 Cisano B.sco (BG) ITALY
Reference standards	EN 362, EN 12275		

## PARTS IDENTIFICATION

PRIMARY ELEMENTS	Body, gate, screw-up locking sleeve, pin, swivel, fixed bar, ACL (Anti-Cross Loading) system, screwgate-sleeve end-stop ring.
SECONDARY ELEMENTS	/
REPLACEABLE PARTS	/

Fill-out this inspection sheet following the inspection procedure, photographs and instructions supplied by the manufacturer, which you can download from [www.climbingtechnology.com](http://www.climbingtechnology.com). **Attention!** The examiner's verdict on the severity of the anomaly must be based on objective criteria and the specific training received. The producer accepts no responsibility deriving from inexact information recorded by the user or servicer.

## DEVICE PERIODIC CHECK SHEET

1) HISTORY AND GENERAL CHECK	
1.1	Check the existence and the readability of the marking details, in particular the CE symbol and the applicable EN norm/standard.
1.2	Check that device has not exceeded the storage and/or in-use lifetime, as stated in the specific instructions for use.
1.3	Check that the device is intact and no parts are missing (check against a new product).
1.4	Check that the device has not been modified outside the factory or serviced in a non-approved centre (check against a new product).
1.5	Check that the device has not experienced an exceptional event (e.g. fall from height, violent blow, etc.). Even in the absence of visible defects or deterioration, the original strength could be seriously reduced.
2) VISUAL CHECK	
2.1	CHECKING THE BODY <ul style="list-style-type: none"><li>• Verify there are no deformations, cuts or cracks more than 1 mm deep.</li><li>• Verify that there are no signs of wear deeper than 1 mm, paying more attention to the areas of contact with rope and other devices. Check there is no corrosion or oxidation.</li></ul>
2.2	CHECKING THE OTHER PARTS (GATE, SCREW-UP LOCKING SLEEVE, PIN, FIXED BAR, ACL SYSTEM, SWIVEL, ETC.) <ul style="list-style-type: none"><li>• Verify there are no deformations, cuts or cracks more than 1 mm deep. Check there is no corrosion or oxidation.</li><li>• Check that all parts are in the original position (check against a new product).</li><li>• Check that internal openings are not obstructed with foreign material.</li></ul>

# PERIODIC CHECKING OF PERSONAL PROTECTIVE EQUIPMENT CONNECTORS

3) FUNCTIONAL CHECK	
3.1	<p>CHECKING CLOSURE SYSTEM CONNECTORS WITH AUTOMATIC GATE AND LOCKING SYSTEM</p> <p>Check how the gate opens by actioning the locking system (locking sleeve or second lever) as shown on the instructions for use. Check that when the locking device is released that it immediately and automatically returns to its position. For models with screw-up docking sleeve: check the operation of the sleeve by unscrewing and screwing it up completely, making sure that the end-stop ring is not loose. For all other models: check that the docking system (sleeve or second gate) automatically returns to the initial position when released. <b>Attention!</b> <u>Check that, with the locking mechanism engaged, that the gate cannot be opened.</u> If necessary, use compressed air to clean and silicone lubricant spray to lubricate all moving parts, as indicated in the instructions for use of the device.</p>
3.2	<p>CHECKING CLOSURE SYSTEM - <u>SCREW-UP CONNECTORS</u></p> <p>Check the functioning of the sleeve by unscrewing and screwing it up completely. When the sleeve is screwed up, the threads should not be visible. If necessary, use compressed air to clean and silicone lubricant spray to lubricate all moving parts, as indicated in the instructions for use of the device.</p>
3.3	<p>CHECKING THE SWIVEL (IF PRESENT)</p> <ul style="list-style-type: none"> <li>• Verify that the swivel can rotate freely without jamming.</li> <li>• Check that the swivel cannot move so far as to cover the green load-indicator ring. In this case it means that the connector has been subjected to a load greater than permitted: remove the connector from service and check, if present, the fall arrest system it was connected to (e.g. retractable type fall arresters) following the corresponding inspection instructions.</li> </ul>
3.4	<p>CHECKING THE ACL SYSTEM</p> <p>Check the ACL bar opens correctly and returns to its initial position when released.</p>
3.5	<p>CHECKING CLOSURE SYSTEM - <u>SQUEEZE-ACTIONED CONNECTORS</u></p> <ul style="list-style-type: none"> <li>• Check opening by forcibly squeezing the handles together.</li> <li>• Check that when the handles are released, the two hooks insert correctly into their respective eyes.</li> </ul>

The examiner's verdict on the severity of the anomaly must be based on objective criteria and the specific training received.  
The producer accepts no responsibility deriving from inexact information recorded by the user or servicer.

# PHOTO APPENDIX CONNECTORS



Connector's markings not completely legible.



Body with distinct signs of use in area subject to wear.



Steel connector completely corroded after long exposure to saline environment.



Oxidation on connector prevents closing catches functioning correctly.



Double-lever connector with clear signs of corrosion.



Connector with clear incision/cut on body.



Connector with screw-up locking sleeve showing clear signs of oxidation.



Connector with screw-up locking sleeve extremely deformed due to incorrect use.

## PHOTO APPENDIX CONNECTORS



Double-lever connector has been subject to major deformation. Body is visibly deformed and double-lever closure mechanism completely compromised.



Connector with damaged nose because of the misalignment of the lever.



Connector with misaligned lever from the body.



Connector with catch no longer aligned with body due to major torsion loading.



Connector with completely blocked lever or with damaged / missing spring



Connector with traditional closure mechanism - closure pin deformed.




With gate in closed position, gate remains slightly open with play towards correctly-closed position.



Connector with gate that remains open.



# PHOTO APPENDIX CONNECTORS

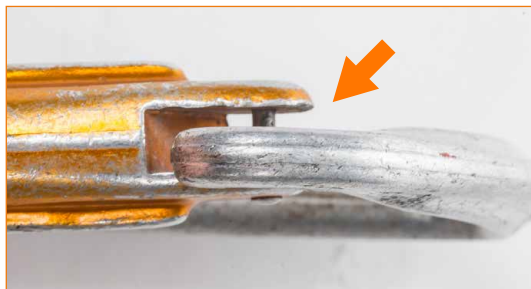

Connector whose gate has excessive lateral play.



Connector whose screw-up locking sleeve has been severely damaged.



Connector with sleeve which doesn't automatically return to the locked position. 🛠️ Lubricate the sleeve as indicated in the user instructions. If the problem is not completely resolved, scrap the device.



Connector with heavily damaged screw gate.



Double-lever connector whose rear safety lever doesn't return automatically into position.



Connector with deformed ACL bar.



Connector with deformed ACL bar.



Connector with missing bar.

## PHOTO APPENDIX CONNECTORS



Connector that has been subjected to forces greater than permitted: the swivel can move far enough to cover the fall indicator.



Connector with worn-out pin.



Connector with material inside holes and cracks.  
🔧 Clean the device with compressed air and soap and water. If the problem is not resolved, scrap the device.



Connector with squeeze-actioned closure which doesn't hook-in correctly.



Connector with squeeze-actioned closure which doesn't hook-in correctly.